



## **MULTIMEDIA ALARM CLOCK RADIO**

With dock for iPod and Aux Input for MP3 Players

### **User Guide**



Congratulations on the purchase of your new Multimedia Alarm Clock Radio. As well as your 3 year parts and labour warranty you have the added peace of mind of dedicated help lines and web support.

### **AFTER SALES SUPPORT**

**UK / N.IRELAND HELPLINE NO 01270 508538**

**REP. IRELAND HELPLINE NO 1800 995 036**

**WEB SUPPORT [www.quesh.co.uk](http://www.quesh.co.uk)**

**MODEL NUMBER: 45465**

# Contents

1

## Chapter

02. General Information and Safety Instructions

03. Battery Handling and Usage

04. Accessories

04. Features

05. Functions

06. Remote Control Operation

07. Getting Started

08. Troubleshooting

09. Technical Specifications



10. Warranty Card

11. Fault Report Card

## General Information & Safety Instructions

2

Please read through the following safety information before first use.

	
The lightening flash and arrowhead within the triangle is a warning sign alerting you of dangerous voltage inside the product	The exclamation mark within the triangle is a warning sign alerting you of important safety instructions concerning the product

**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**

### Safety Precautions

- To avoid risk of electric shock do not attempt to open this appliance.
- Keep away from fire.
- Do not expose this product to water, rain or dampness.
- Keep this appliance away from direct sunlight and other heat sources.
- Keep this appliance away from strong magnets.
- Avoid covering or placing heavy objects on top of the appliance.
- Always disconnect the appliance from mains power before cleaning.
- Clean the exterior of the appliance with a soft cloth only.
- Never obstruct the ventilation holes.

Helpline No. UK/Northern Ireland 01270 508538 Rep.Ireland 1800 995 036  
Web Support [www.quesh.co.uk](http://www.quesh.co.uk)  
Model No: 45465

3

## Battery Handling and Usage


3

### Battery Safety

- Never throw batteries into fire or expose to excessive heat sources.
- If batteries are swallowed, please seek immediate medical attention.
- Ensure correct +/- polarity when installing batteries.
- Do not recharge non-rechargeable batteries.
- Do not combine old and new batteries.

### Battery Backup / Replacement


This product uses a battery back up system to provide continuous alarm operation and clock settings in the event of a power failure. Please replace the batteries if the clock or alarm stop working. Ensure the product is connected to mains power when replacing the batteries. This will ensure the settings are not lost. To replace the batteries, open the battery compartment located on the underside of the product and insert 2 x AAA size batteries as per the diagram on the right. Always ensure the correct +/- polarity when inserting new batteries.

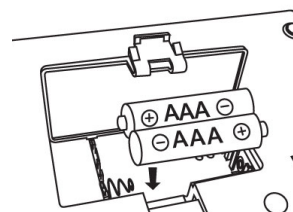

### Remote Control

The remote control uses 1 x CR2032 type battery which is already installed. Please remove the clear plastic battery insulator tab before use. If the remote control stops working or its range is reduced, please replace the battery with a new one.

1. The battery compartment is located at the bottom of the remote control.
2. Pull out the battery compartment.
3. Insert 1 x CR2032, 3 volt lithium battery ensuring the correct polarity.
4. Slide the battery compartment back into place.

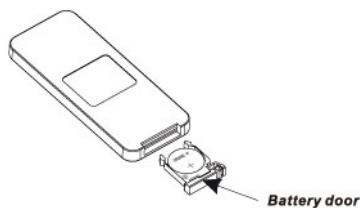

## Disposal of Your Old Product

Electric and electronic equipment (EEE) contains materials, parts and substances which can be dangerous to the environment and harmful to human health. Once this appliance has reached the end of its life span, the unit in its entirety should be taken to a recycling centre. Please contact your local authority for details of recycling schemes in your area.



Do not dispose of batteries in your household waste. Please contact your local authority for details on safe disposal.



Do not dispose of this product in your household waste. Please contact your local authority for details of recycling schemes in your area.

## Accessories

4

- Remote control
- Mains power adaptor
- iPod connectors x 3

 
## Features

- iPod dock – Charges iPod when connected
- USB input and SD card reader
- Dual alarm clock with sleep / snooze function
- PLL FM radio
- LCD display with blue backlight
- Program memory
- Stereo headphone jack
- Aux input for connecting MP3 players
- FM antenna
- Remote control (Including battery)
- Power output 2 x 2W


## Functions

5


### Top Panel

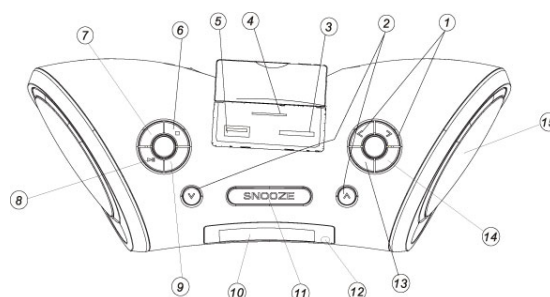

### Back Panel

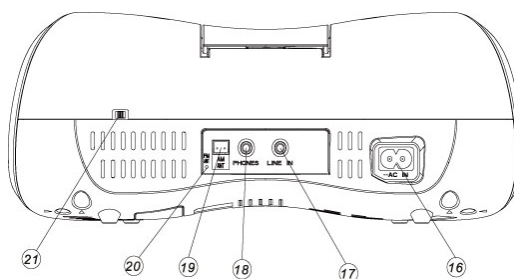 

### Bottom Panel

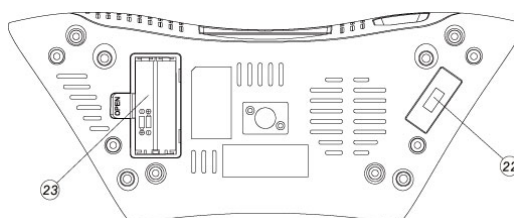 


1. Skip -/+
2. Vol -/+
3. SD card reader
4. iPod dock
5. USB input
6. Stop
7. Power ON/OFF
8. Play / Pause / Scan
9. Alarm 1
10. LCD display
11. Snooze
12. Remote sensor
13. Alarm 2
14. Memory / Set
15. Speaker
16. AC power supply
17. Aux in jack
18. Stereo headphone jack
19. FM soft antenna
20. Not applicable
21. Alarm ON/OFF
22. Not applicable
23. Battery compartment

## Remote Control

 
6

### Remote Control Panel

1. Power ON/OFF
2. Play / Pause / Scan
3. Stop
4. Memory / Set
5. Random
6. Volume +/-
7. Mute
8. Folder +/-, Memory +/-, iPod scroll up / down
9. Repeat
10. Menu
11. Select
12. Skip +/-
13. Mode

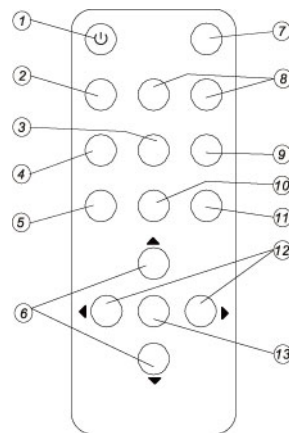

### LCD Display

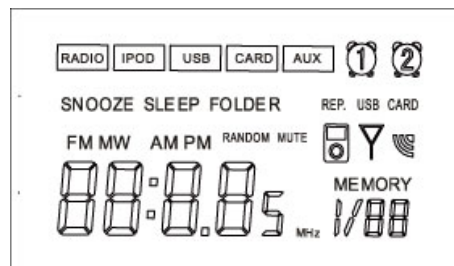 

## Getting Started

7

### Basic Operation

#### Switching on

1. Press POWER ON/OFF. The LCD display will illuminate.
2. Press MODE to select function (Radio, iPod, USB, Card, Aux).
3. Press POWER ON/OFF to put the unit in stand-by mode.


#### Setting the clock

1. Press and hold MEMORY/SET to select 12hr or 24hr mode.
2. Press MEMORY/SET once, then clock digits for hours flashes.
3. Press SKIP +/- repeatedly to set and adjust the hours.
4. Press MEMORY/SET once, then clock digits for minutes flashes.
5. Press SKIP +/- repeatedly to set and adjust the minutes.
6. Press MEMORY/SET to confirm.

#### Setting the alarms

Two different alarm times can be set. You can choose to wake up to Buzzer, Radio, iPod, USB or SD Card.

1. Please ensure the alarm ON/OFF at the back of the unit is set to ON.
2. In any mode, press and hold ALARM1 or ALARM2 for two seconds (ALARM1 / ALARM2 icon appears and the hour digits flash).
3. Press SKIP +/- repeatedly to adjust and set the hours.
4. Press ALARM1 / ALARM2 to confirm.
5. Press SKIP +/- repeatedly to adjust and set the minutes.
6. Press ALARM1 / ALARM2 to confirm.
7. Press SKIP+ again to select between Buzzer, Radio, iPod, USB or SD Card and confirm by pressing the relevant ALARM1 or 2.

- 
8. Press MEMORY/SET to confirm.
  9. At the set alarm time, the Buzzer, Radio, iPod, USB or Card will automatically switch on.
  10. Slide the ALARM ON/OFF button to arm or disarm functions. When armed the related alarm icon appears in the display.
  11. When the alarm is sounding, slide ALARM ON/OFF button to OFF to stop the alarm and reset it to come on the following day.
  12. Press the SNOOZE button after the alarm sounds. The alarm will stop and will come back on 9 minutes later. The snooze function can be activated several times during one hour alarm cycle.

#### **Sleep Mode**

This unit has a built in sleep timer which enables the radio to switch off automatically after a set time period. **Please note this function is only available in radio mode.**

1. Press and hold the SNOOZE button until SLEEP and 120 appears in the display.
2. Press the SNOOZE button repeatedly until your desired timer option appears (00=>05=>10=>15=>30=>45=>60=>90=>120).
3. The unit will turn off automatically at the selected time interval.
4. To cancel sleep press SNOOZE again until 00 appears in the display.

#### **Radio**

1. Press MODE and select RADIO (Display shows the radio frequency of the last selected waveband. Your preset station is also shown if you are listening to a preset).
2. Automatic Tuning – Press and hold the SCAN button until the frequency on the display begins to move, then release the button. The tuner will scan up or down the band frequency and will store stations automatically as they are found.
3. Manual Tuning – Press and hold the SKIP+/- button repeatedly until the display is showing the frequency to your desired station. Use the manual tuning function to tune to weaker stations that are bypassed using the automatic tuning function.

### Storing Preset Stations

You can store up to 20 FM preset stations in the memory

1. Press SKIP+/- to tune to your desired station.
2. Press and hold MEMORY/SET button for a brief second (MEMORY will flash on the display) to activate the programming mode.
3. Press SKIP+/- button to select the preset number you desire.
4. Press MEMORY/SET button to store the station.
5. Repeat steps 2-4 to store other stations.
6. Press MEMORY/SET button to listen to a preset station.

### Connecting your iPod

1. The iPod dock will support most iPod models without the need to use any of the 3 connection brackets supplied. If however you prefer to use a bracket for extra support, they are compatible with the following models: -
  - 1<sup>st</sup> generation nano (iPod nano 2GB / 4GB)
  - iPod Mini (iPod mini 4GB / 8GB)
  - iPod (3<sup>rd</sup> nano 4GB / 8GB, 5<sup>th</sup> 30GB / 160GB, classic 50GB, touch 8GB)
2. Plug the compatible iPod into the dock connector.
3. Press MODE to select iPod. Playback will start automatically.
4. You can use PLAY/PAUSE, SKIP+/- and VOLUME+/- buttons on the unit and remote control. The following features are available: -
  - PLAY / PAUSE
  - Selecting NEXT / PREVIOUS track
  - Changing VOLUME UP/DOWN



### **USB Connection**

**Please note, the only file format supported by the USB interface is MP3.**

1. Insert USB drive into the USB port.
2. Press MODE to select USB. Playback will start automatically.
3. NOTE: Before removing the USB drive, ensure to power off the unit.

### **SD Card Reader**

**Please note, the only file format supported by the SD card reader is MP3.**

1. Insert your SD/MMC Card into the reader slot.
2. Press MODE to select CARD. Playback will start automatically.
3. NOTE: Before removing the SD Card, ensure to power off the unit.

### **Aux Input**

1. Use a line-in cable (not supplied) to connect external devices such as MP3 players.
2. Press MODE and select AUX.
3. Press play on the external device and the sound will play through the unit.

Warning: Do not attempt to repair the unit yourself as this will invalidate the warranty.

### **No Sound**

Adjust volume +.

Check MUTE is off.

### **Display Error / Controls not Working**

Unplug from the main power, then re-plug.

Remove back-up batteries. Wait one hour then reinsert.

### **Intermittent Crackling Sound during FM playback**

Weak signal. Extend and reposition the soft antenna wire.

Alarm does not Function

### **Alarm time / mode not set. Refer to setting the alarm**

Volume set too low. Ensure volume is on.

### **iPod does not dock correctly / not working**

Make sure you are using the correct bracket.

Remove iPod from dock, check for debris and re-dock.

### **Remote Control doesn't work**

Ensure there are no obstacles between the remote control and sensor on the unit

Check if the battery needs replacing

## Technical Specifications

9

Power Supply	AC 230V-50Hz
Power Consumption	13 watts
Unit Dimensions	284 x 110 x 104 (L x W x H)
Weight	1.12 kgs
Frequency Range	FM 87.5 – 108MHz
Output Power	2W x 2 RMS
Speakers	80hms
Headphone Jack	3.5mm
USB	Supports version 1.1 (Fat) < 8GB



## MULTIMEDIA ALARM CLOCK RADIO

### WARRANTY CARD

**Congratulations!** You have made an excellent choice with the purchase of this quality product. Our commitment to quality also includes our service. Should you, contrary to expectations, experience issues due to manufacturing faults during private use within 36 months of the date of purchase we shall be liable for warranty in accordance with statutory warranty regulations provided that: -

- the device was not put to any use other than the intended
- was not overloaded
- was not used with the wrong accessories
- repairs were carried out only by the customer service centre

The warranty certificate is only valid in connection with the receipt. Please keep both in a safe place. This does not affect your statutory rights.

The purchase is guaranteed for a period of three years beginning on the day of purchase. Keep your purchase receipt safe as proof of date of purchase. The guarantee can only be extended for the duration of any repair required.

Should your item become defective during the warranty period, in the first instance, please call our customer service centre, they will then inform you of what to do next. We will at our discretion, either repair or exchange the device in accordance with warranty legislation.

Please enclose the following when sending your product in for repair: -

- 1.Receipt (proof of purchase)
- 2.This warranty certificate and fault report card complete with your contact details and fault description.

If the original receipt is not enclosed the repair will be charged in all cases. After the warranty has expired you can still send defective devices for repairs to the address stated below. Quotes as well as repairs after the warranty period are to be paid in all cases.

Ensure that the product is well packed as no responsibility can be accepted for items lost or damaged in transit. This warranty does not affect your statutory rights.





## FAULT REPORT CARD

Name \_\_\_\_\_

Address \_\_\_\_\_

Email \_\_\_\_\_

Contact Tel No. \_\_\_\_\_

**Model Number 45465**

Fault Description \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

## SERVICE CENTRE HELPLINE

Quesh Ltd  
1 Solway Court, Crewe Business Park, Crewe, CW1 6LD

UK/N.Ireland 01270 508538

Rep.Ireland 1800 995 036

web: [www.quesh.co.uk](http://www.quesh.co.uk)